

# Fuse box diagram

☰ Menu




## Fuses and relay Volkswagen Caddy 1996-2003

For the Volkswagen Caddy 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003 model year.

**Fuse box in passenger compartment (1996-).**



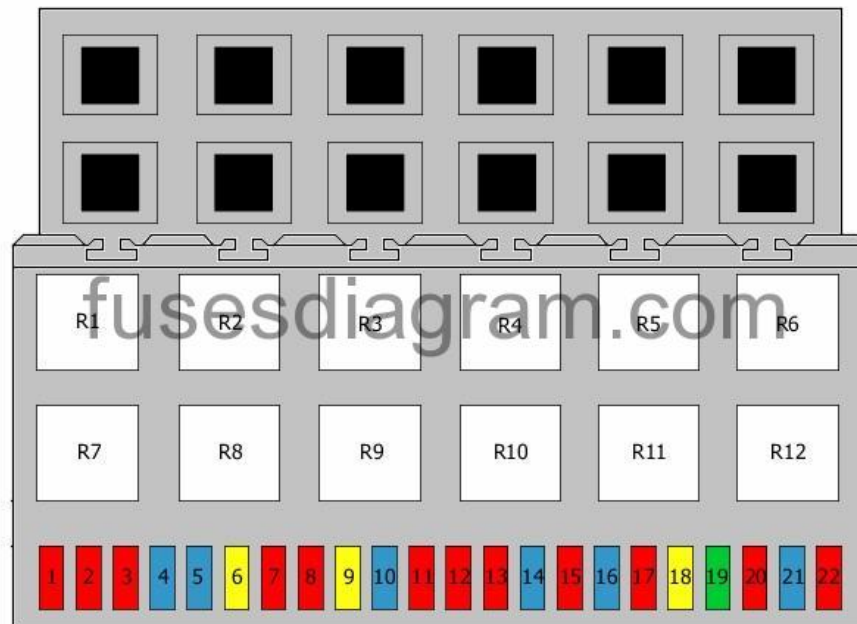


Fuse	AMPS	Circuits Protected
1	10A	Left dipped beam Left headlight levelling
2	10A	Right dipped beam Right headlight levelling
3	10A	Number plate light(s)
4	15A	Rear wiper motor
5	15A	Windscreen wash/wipe system Heated washer jet(s)
6	20A	Blower Air conditioning
7	10A	Right sidelight Right tail light
8	10A	Left sidelight Left tail light
9	20A	Heated rear windscreen
10	15A	Fog light(s)
11	10A	Left main beam

Fuse	AMPS	Circuits Protected
12	10A	Right main beam
13	10A	Horn
14	15A	Reversing light(s) Optional equipment
15	10A	Engine electrics
16	15A	Instrument panel Interior light(s)
17	10A	Hazard warning lights
18	20A	Fuel pump Oxygen sensor
19	30A	Cooling fan Air conditioning
20	10A	Brake light(s)
21	15A	Interior light(s) Instrument panel On-board diagnostic
22	10A	Radio <b>Cigarette lighter</b>
R1		Not used
R2		Rear wash/wipe system
R3		Engine management
R4		X contact relief
R5		Not used
R6		Hazard warning lights
R7		Headlight washers
R8		Intermittent wash/wipe system



Fuse	AMPS	Circuits Protected
R9		Not used
R10		Fog light bridge
R11		Horn bridge
R12		Fuel pump Glow plugs

### Fuse box diagram (2000-).

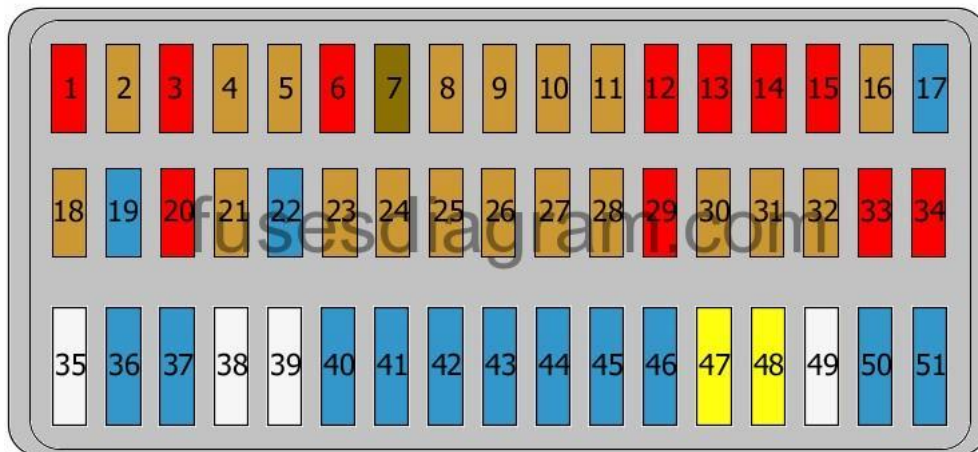

Fuse	AMPS	Circuits Protected
1	10A	Engine management
2	5A	Number plate light(s)
3	10A	Injectors
4	5A	Left sidelight
5	5A	Right sidelight
6	10A	Rear wiper
7	7,5A	Direction indicators

Fuse	AMPS	Circuits Protected
8	5A	ABS EDS
9	5A	Headlight range control Heated seat(s)
10	5A	Interior light(s) Luggage compartment light(s)
11	5A	Instrument panel Diagnostic system
12	10A	Left main beam Lighting for the controls
13	10A	Right main beam
14	10A	Hazard warning lights Alarm system
15	10A	Brake light(s)
16	5A	Radio
17	15A	12V socket
18	5A	Heated mirror(s)
19	15A	Horns
20	10A	CD changer
21	5A	Automatic transmission
22	15A	Alarm horn
23	5A	Coolant heater
24	5A	Engine management
25	5A	Automatic transmission position indicator light(s)
26	5A	Central locking pump Security alarm diode




Fuse	AMPS	Circuits Protected
		Electric mirror controls
27	5A	Instrument panel
28	5A	Speed sensor Immobiliser
29	10A	Heated washer jets Reversing light(s)
30	5A	Engine management
31	5A	Engine management Diagnostic system Immobiliser
32	5A	Engine management, diesel
33	10A	Automatic transmission control unit Multifunction switch
34	10A	Ignition coil(s)
35	25A	Sliding roof
36	15A	Engine management
37	15A	Engine management (30A also used)
38	25A	Left window
39	25A	Right window
40	15A	Fuel pump
41	15A	Central locking unit
42	15A	Radio
43	15A	Fog light(s)
44	15A	Left dipped beam
45	15A	Right dipped beam



Fuse	AMPS	Circuits Protected
46	15A	<b>Cigarette lighter</b>
47	20A	Headlight washers
48	20A	Heated rear windscreen
49	25A	Blower
50	15A	Wash/wipe system
51	15A	Heated seat(s)

### Relay box in passenger compartment Volkswagen Caddy.

(2000-)

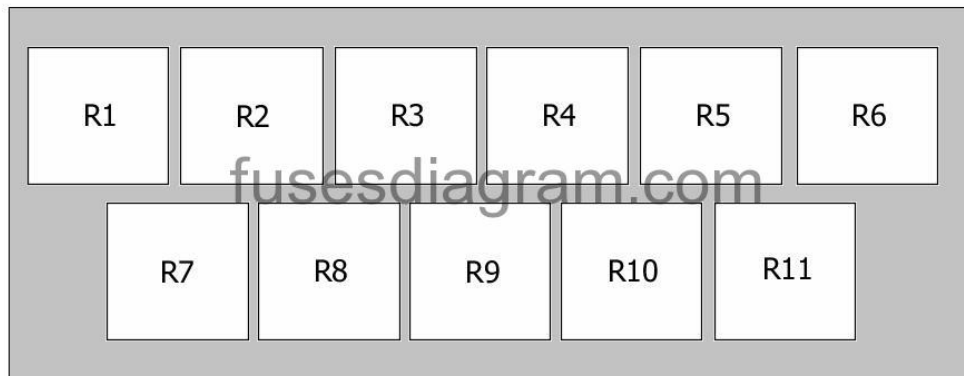

Relay R1 – Air-conditioning fan relay Or Air-conditioning fan, stage 2 relay

Relay R2 – Fuel pump relay Or Glow plug relay

Relay R3 – Automatic transmission relay or not used

Relay R4 – Fuel cut-off relay

Relay R5 – Secondary air pump relay

Relay R6 – Relief relay for X contact

Relay R7 – Main relay

Relay R8 – Headlight washer relay


Relay R9 – Wiper relay

^

## Relay R10 – Horn relay

Relay R11 – Intermittent wiper relay Or Rain sensor relay

## Fuse box in engine compartment (on battery 2000-).

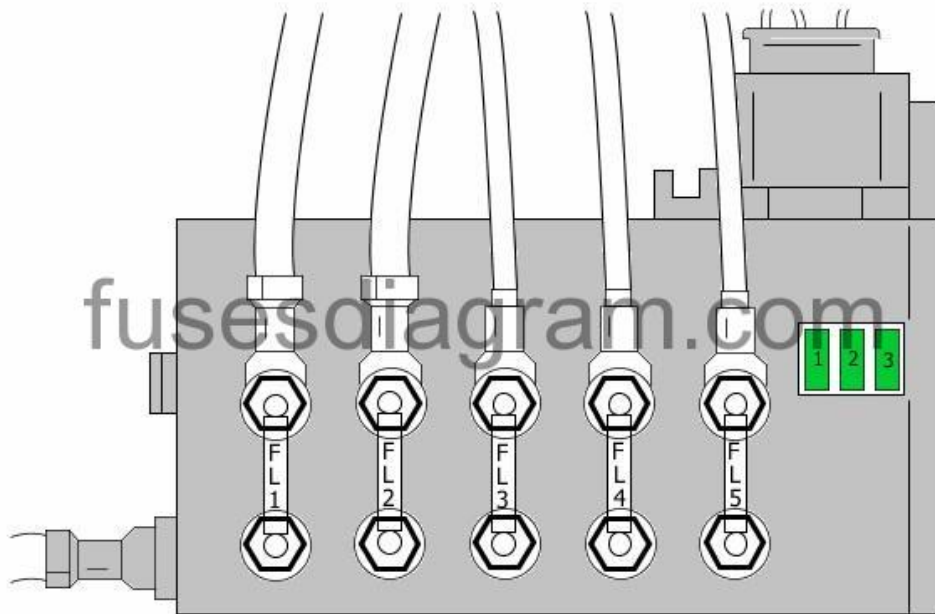

Fuse	AMPS	Circuits Protected
1	30A	Cooling fan Air conditioning
2	30A	ABS pump
3	30A	ABS Or ESP control unit
FL1	110A	Alternator (150A also used)
FL2	110A	Interior
FL3	30A	Additional cooling fan



Fuse	AMPS	Circuits Protected
FL4	50A	Engine management
FL5	50A	Coolant heater Or Secondary air pump

## 📁 Volkswagen

### 🔍 Fuse box diagram Volkswagen

- < Fuses and relay Volkswagen Amarok
- > Fuses and relay Volkswagen CC

## Ads

## Categories

Alfa Romeo

Audi

BMW

Buick

Cadillac



Chevrolet  
Chrysler  
Citroen  
Daihatsu  
Dodge  
Fiat  
Ford  
Honda  
Hyundai  
Iveco  
Jeep  
Kia  
Land Rover  
Lexus  
Mazda  
Mercedes  
Mercury  
Mitsubishi  
Nissan  
Opel/Vauxhall  
Peugeot  
Range Rover  
Renault  
Suzuki  
Toyota  
Volkswagen



For informational purposes only. Manufacturer does not assume any liability. Use at your own risk. For qualified repairs, contact authorized service centers. All trademarks are a property of fusesdiagram.com

© 2023 Fuse box diagram

